

## 4.5A Dual High-Speed Power MOSFET Drivers

#### Features

- High Peak Output Current: 4.5A (typ.)
- Low Shoot-Through/Cross-Conduction Current in Output Stage
- Wide Input Supply Voltage Operating Range:
- 4.5V to 18V
- High Capacitive Load Drive Capability:
  - 2200 pF in 15 ns
  - 5600 pF in 34 ns
- Short Delay Times: 40 ns (typ.)
- Low Supply Current:
  - With Logic '1' Input 1.0 mA (typ.)
  - With Logic '0' Input 150 µA (typ.)
- Latch-Up Protected: Will Withstand 1.5A Reverse Current
- Logic Input Will Withstand Negative Swing Up To 5V
- Packages: 8-Pin SOIC, PDIP, 8-Pin 6x5 DFN, and 16-Pin SOIC

#### Applications

- · Switch Mode Power Supplies
- Pulse Transformer Drive
- Line Drivers
- · Motor and Solenoid Drive

#### **General Description**

The MCP1403/4/5 are a family of dual-inverting, dualnon-inverting, or complimentary output drivers. They can delivery high peak currents of 4.5A typically into capacitive loads. These devices also feature low shootthrough current, matched rise/fall times and propagation delays.

The MCP1403/4/5 drivers operate from a 4.5V to 18V single power supply and can easily charge and discharge 2200 pF gate capacitance in under 15 ns (typ). They provide low enough impedances in both the on and off states to ensure the MOSFETs intended state will not be affected, even by large transients. The input to the MCP1403/4/5 may be driven directly from either TTL or CMOS (3V to 18V).

The MCP1403/4/5 dual-output 4.5A driver family is offered in both surface-mount and pin-through-hole packages with a -40°C to +125°C temperature rating. The low thermal resistance of the thermally enhanced DFN package allows for greater power dissipation capability for driving heavier capacitive or resistive loads.

These devices are highly latch-up resistant under any conditions within their power and voltage ratings. They are not subject to damage when up to 5V of noise spiking (of either polarity) occurs on the ground pin. All terminals are fully protect against Electrostatic Discharge (ESD) up to 4 kV.


#### Package Types

	-	Pin /SOIC	мс	N ₽1403 ↓	ИСР	1404		91405 ↓	
NC	1•	8	N	C	NC		NC	;	
IN A		7		UT A	OU.		OL	JT A	
GND		6			V <sub>DD</sub>		VD		
IN B	4	5	0	UT B	OU.	ТΒ	OL	JT B	
			ר.	MCP14			1404 N	MCP14	05
	8-P	in DFN <sup>(2</sup>	2)	•			-	↓	
NC	1		8	NC		NC		NC	
IN A	2		7	OUT	Ā	OUT	Ā	OUT A	Ā
GND	3		6	$V_{DD}$		V <sub>DD</sub>		$V_{DD}$	
IN B	4		5	OUTI	В	OUT	В	OUT E	3

		MCP1404 MCP1403 │ MCP1405						
	16-Pin SOIC		¥	ł	↓			
NC 1	•	16	NC	NC	NC			
IN A 2		15	OUT A	OUT A	OUT A			
NC 3		14	OUT A	OUT A	OUT A			
GND 4		13	V <sub>DD</sub>	$V_{DD}$	V <sub>DD</sub>			
GND 5		12	V <sub>DD</sub>	$V_{DD}$	V <sub>DD</sub>			
NC 6		11	OUT B	OUT B	OUT B			
IN B 7		10	OUT B	OUT B	OUT B			
NC 8		9	NC	NC	NC			
Note 1:	Duplicate pir proper operation		iust both	be cor	nnected for			
2:	Exposed pad isolated.	of th	e DFN pa	ckage is	electrically			

© 2007 Microchip Technology Inc.

## Functional Block Diagram (1)

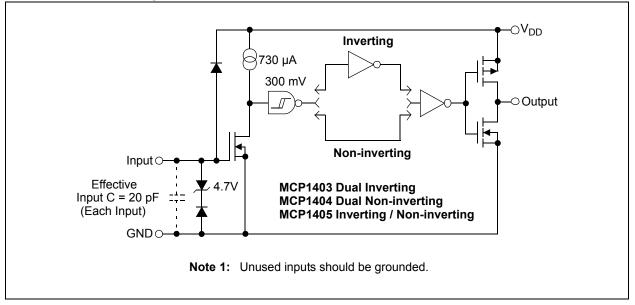

### 1.0 ELECTRICAL CHARACTERISTICS

#### Absolute Maximum Ratings †

Supply Voltage	+20V
Input Voltage	(V <sub>DD</sub> + 0.3V) to (GND – 5V)
Input Current (V <sub>IN</sub> >V <sub>DD</sub> )	50 mA

**† Notice:** Stresses above those listed under "Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at those or any other conditions above those indicated in the operational sections of this specification is not intended. Exposure to maximum rating conditions for extended periods may affect device reliability.

## DC CHARACTERISTICS (NOTE 2)

<b>Electrical Specifications:</b> Unless otherwise indicated, $T_A = +25^{\circ}C$ , with $4.5V \le V_{DD} \le 18V$ .								
Parameters	Sym	Min	Тур	Мах	Units	Conditions		
Input								
Logic '1', High Input Voltage	V <sub>IH</sub>	2.4	1.5	—	V			
Logic '0', Low Input Voltage	V <sub>IL</sub>	—	1.3	0.8	V			
Input Current	I <sub>IN</sub>	-1	—	1	μA	$0V \leq V_{IN} \leq V_{DD}$		
Input Voltage	V <sub>IN</sub>	-5	—	V <sub>DD</sub> +0.3	V			
Output								
High Output Voltage	V <sub>OH</sub>	$V_{DD} - 0.025$	—	—	V	DC Test		
Low Output Voltage	V <sub>OL</sub>	—	—	0.025	V	DC Test		
Output Resistance, High	R <sub>OH</sub>	—	2.2	3.0	Ω	I <sub>OUT</sub> = 10 mA, V <sub>DD</sub> = 18V		
Output Resistance, Low	R <sub>OL</sub>	—	2.8	3.5	Ω	I <sub>OUT</sub> = 10 mA, V <sub>DD</sub> = 18V		
Peak Output Current	I <sub>PK</sub>	—	4.5	—	Α	V <sub>DD</sub> = 18V (Note 2)		
Latch-Up Protection With- stand Reverse Current	I <sub>REV</sub>	—	>1.5	—	A	Duty cycle $\leq$ 2%, t $\leq$ 300 µsec		
Switching Time (Note 1)	1							
Rise Time	t <sub>R</sub>	—	15	28	ns	Figure 4-1, Figure 4-2 C <sub>L</sub> = 2200 pF		
Fall Time	t <sub>F</sub>	—	18	28	ns	Figure 4-1, Figure 4-2 C <sub>L</sub> = 2200 pF		
Delay Time	t <sub>D1</sub>	—	40	48	ns	Figure 4-1, Figure 4-2		
Delay Time	t <sub>D2</sub>	—	40	48	ns	Figure 4-1, Figure 4-2		
Power Supply								
Supply Voltage	V <sub>DD</sub>	4.5	_	18.0	V			
Power Supply Current	۱ <sub>S</sub>	—	1.0	2.0	mA	V <sub>IN</sub> = 3V (Both Inputs)		
	۱ <sub>S</sub>		0.15	0.25	mA	V <sub>IN</sub> = 0V (Both Inputs)		

Note 1: Switching times ensured by design.

2: Tested during characterization, not production tested.

### DC CHARACTERISTICS (OVER OPERATING TEMPERATURE RANGE)

<b>Electrical Specifications:</b> Unless otherwise indicated, operating temperature range with 4.5V $\leq$ V <sub>DD</sub> $\leq$ 18V.									
Parameters	Sym	Min	Тур	Max	Units	Conditions			
Input									
Logic '1', High Input Voltage	VIH	2.4	—	—	V				
Logic '0', Low Input Voltage	V <sub>IL</sub>	—	—	0.8	V				
Input Current	I <sub>IN</sub>	-10	_	+10	μA	$0V \le V_{IN} \le V_{DD}$			
Output									
High Output Voltage	V <sub>OH</sub>	$V_{DD} - 0.025$	_	—	V	DC TEST			
Low Output Voltage	V <sub>OL</sub>	—		0.025	V	DC TEST			
Output Resistance, High	R <sub>OH</sub>	—	3.1	6.0	Ω	I <sub>OUT</sub> = 10 mA, V <sub>DD</sub> = 18V			
Output Resistance, Low	R <sub>OL</sub>	—	3.7	7	Ω	I <sub>OUT</sub> = 10 mA, V <sub>DD</sub> = 18V			
Switching Time (Note 1)									
Rise Time	t <sub>R</sub>	—	25	40	ns	Figure 4-1, Figure 4-2 C <sub>L</sub> = 2200 pF			
Fall Time	t <sub>F</sub>	—	25	40	ns	Figure 4-1, Figure 4-2 C <sub>L</sub> = 2200 pF			
Delay Time	t <sub>D1</sub>	—	50	65	ns	Figure 4-1, Figure 4-2			
Delay Time	t <sub>D2</sub>	—	50	65	ns	Figure 4-1, Figure 4-2			
Power Supply				•		•			
Power Supply Current	۱ <sub>S</sub>	—	2.0 0.2	3.0 0.3	mA	V <sub>IN</sub> = 3V (Both Inputs) V <sub>IN</sub> = 0V (Both Inputs)			

Note 1: Switching times ensured by design.

2: Tested during characterization, not production tested.

### **TEMPERATURE CHARACTERISTICS**

<b>Electrical Specifications:</b> Unless otherwise noted, all parameters apply with 4.5V $\leq V_{DD} \leq 18V$ .								
Parameters	Sym	Min	Тур	Max	Units	Conditions		
Temperature Ranges								
Specified Temperature Range	Τ <sub>Α</sub>	-40	_	+125	°C			
Maximum Junction Temperature	Τ <sub>J</sub>	_	_	+150	°C			
Storage Temperature Range	T <sub>A</sub>	-65		+150	°C			
Package Thermal Resistances								
Thermal Resistance, 8L-6x5 DFN	$\theta_{JA}$	—	33.2	—	°C/W	Typical four-layer board with vias to ground plane		
Thermal Resistance, 8L-PDIP	$\theta_{JA}$		125	_	°C/W			
Thermal Resistance, 8L-SOIC	$\theta_{JA}$		155	_	°C/W			
Thermal Resistance, 16L-SOIC	$\theta_{JA}$	—	155	—	°C/W	4-Layer JC51-7 Standard Board, Natural Convection		

### 2.0 TYPICAL PERFORMANCE CURVES

Note: Unless otherwise indicated,  $T_A$  = +25°C with 4.5V  $\leq V_{DD} \leq$  18V.

**Note:** The graphs and tables provided following this note are a statistical summary based on a limited number of samples and are provided for informational purposes only. The performance characteristics listed herein are not tested or guaranteed. In some graphs or tables, the data presented may be outside the specified operating range (e.g., outside specified power supply range) and therefore outside the warranted range.

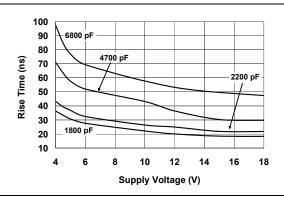


FIGURE 2-1: Rise Time vs. Supply Voltage.

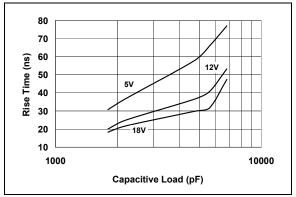


FIGURE 2-2: Rise Time vs. Capacitive Load.

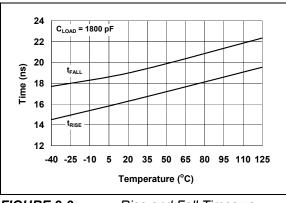



FIGURE 2-3: Temperature.



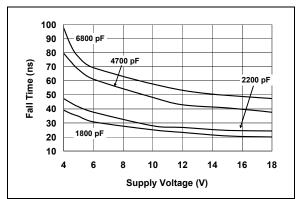


FIGURE 2-4: H Voltage.

Fall Time vs. Supply

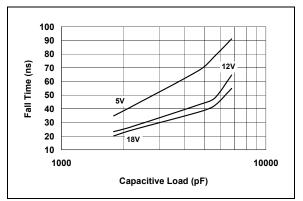


FIGURE 2-5: Fall Time vs. Capacitive Load.

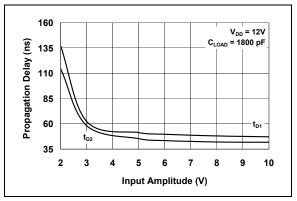


FIGURE 2-6: Amplitude.

Propagation Delay vs. Input

#### **Typical Performance Curves (Continued)**

Note: Unless otherwise indicated,  $T_A$  = +25°C with 4.5V  $\leq V_{DD} \leq$  18V.


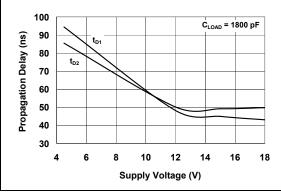


FIGURE 2-7: Propagation Delay Time vs. Supply Voltage.

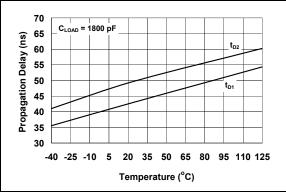

*FIGURE 2-8:* Propagation Delay Time vs. Temperature.


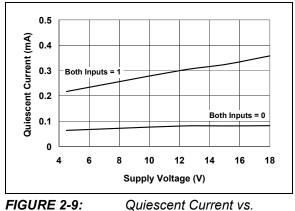


FIGURE 2-9: Supply Voltage.

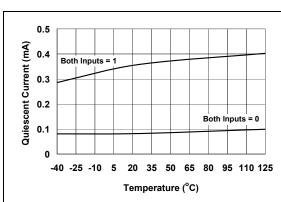

*FIGURE 2-10:* Quiescent Current vs. Temperature.


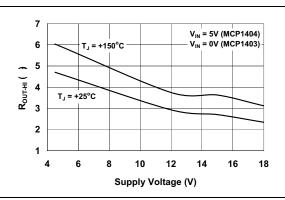



FIGURE 2-11: Output Resistance (Output High) vs. Supply Voltage.

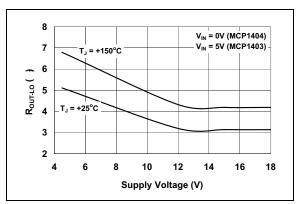



**FIGURE 2-12:** Output Resistance (Output Low) vs. Temperature.

#### **Typical Performance Curves (Continued)**


Note: Unless otherwise indicated,  $T_A$  = +25°C with 4.5V  $\leq V_{DD} \leq$  18V.

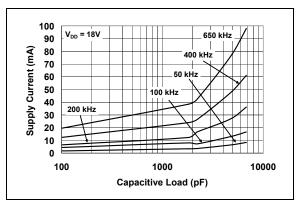



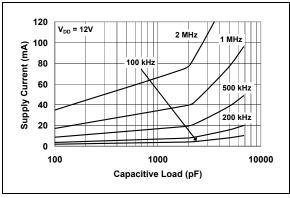

*FIGURE 2-14:* Supply Current vs. Capacitive Load.

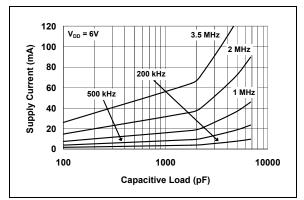

*FIGURE 2-15:* Supply Current vs. Capacitive Load.

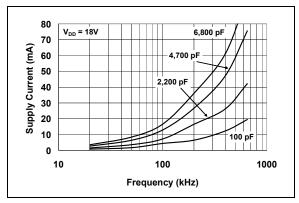


FIGURE 2-16: Frequency.

Supply Current vs.

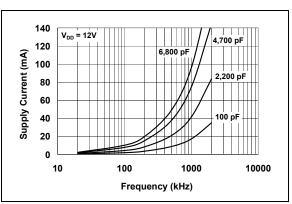


FIGURE 2-17: Supply Current vs. Frequency.

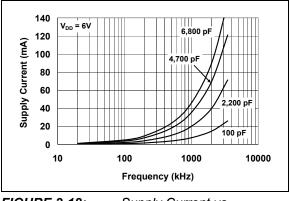


FIGURE 2-18: Frequency.

Supply Current vs.

#### **Typical Performance Curves (Continued)**

Note: Unless otherwise indicated,  $T_A$  = +25°C with 4.5V  $\leq V_{DD} \leq$  18V.

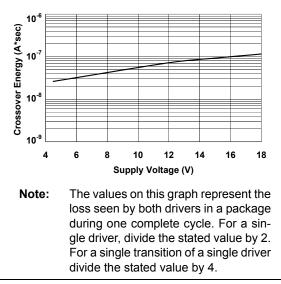


FIGURE 2-19: Crossover Energy vs. Supply Voltage.

#### 3.0 PIN DESCRIPTIONS

The descriptions of the pins are listed in Table 3-1.

8-Pin PDIP SOIC	8-Pin DFN	16-Pin SOIC	Symbol	Description
1	1	1	NC	No Connection
2	2	2	IN A	Control Input for Output A
	_	3	NC	No Connection
3	3	4	GND	Ground
_	_	5	GND	Ground
_	_	6	NC	No Connection
4	4	7	IN B	Control Input for Output B
_	_	8	NC	No Connection
_	_	9	NC	No Connection
5	5	10	OUT B	Output B
_	_	11	OUT B	Output B
6	6	12	V <sub>DD</sub>	Supply Input
_	_	13	V <sub>DD</sub>	Supply Input
7	7	14	OUT A	Output A
_	_	15	OUT A	Output A
8	8	16	NC	No Connection
—	PAD	—	NC	Exposed Metal Pad

TABLE 3-1:PIN FUNCTION TABLE (1)

**Note 1:** Duplicate pins must be connected for proper operation.

#### 3.1 Supply Input (V<sub>DD</sub>)

 $V_{DD}$  is the bias supply input for the MOSFET driver and has a voltage range of 4.5V to 18V. This input must be decoupled to ground with a local capacitor. This bypass capacitor provides a localized low-impedance path for the peak currents that are to be provided to the load.

#### 3.2 Control Inputs A and B

The MOSFET driver input is a high-impedance, TTL/ CMOS-compatible input. The input also has hysteresis between the high and low input levels, allowing them to be driven from slow rising and falling signals, and to provide noise immunity.

### 3.3 Ground (GND)

Ground is the device return pin. The ground pin should have a low impedance connection to the bias supply source return. High peak currents will flow out the ground pin when the capacitive load is being discharged.

#### 3.4 Outputs A and B

Outputs A and B are CMOS push-pull output that is capable of sourcing and sinking 4.5A of peak current  $(V_{DD} = 18V)$ . The low output impedance ensures the gate of the external MOSFET will stay in the intended state even during large transients. These output also has a reverse current latch-up rating of 1.5A.

#### 3.5 Exposed Metal Pad

The exposed metal pad of the DFN package is not internally connected to any potential. Therefore, this pad can be connected to a ground plane or other copper plane on a printed circuit board to aid in heat removal from the package.

<sup>© 2007</sup> Microchip Technology Inc.

### 4.0 APPLICATION INFORMATION

#### 4.1 General Information

MOSFET drivers are high-speed, high current devices which are intended to source/sink high peak currents to charge/discharge the gate capacitance of external MOSFETs or IGBTs. In high frequency switching power supplies, the PWM controller may not have the drive capability to directly drive the power MOSFET. A MOSFET driver like the MCP1403/4/5 family can be used to provide additional source/sink current capability.

#### 4.2 MOSFET Driver Timing

The ability of a MOSFET driver to transition from a fully off state to a fully on state are characterized by the drivers rise time ( $t_R$ ), fall time ( $t_F$ ), and propagation delays ( $t_{D1}$  and  $t_{D2}$ ). The MCP1403/4/5 family of drivers can typically charge and discharge a 2200 pF load capacitance in 15 ns along with a typical matched propagation delay of 40 ns. Figure 4-1 and Figure 4-2 show the test circuit and timing waveform used to verify the MCP1403/4/5 timing.

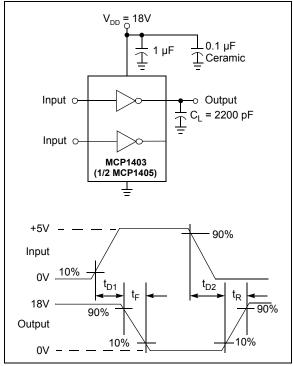


FIGURE 4-1: Inverting Driver Timing Waveform.

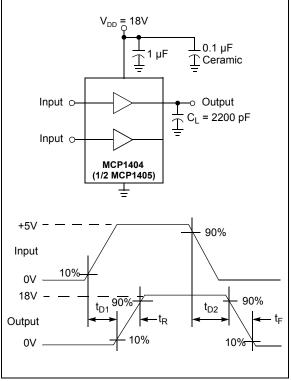


FIGURE 4-2: Non-Inverting Driver Timing Waveform.

#### 4.3 Decoupling Capacitors

Careful layout and decoupling capacitors are highly recommended when using MOSFET drivers. Large currents are required to charge and discharge capacitive loads quickly. For example, 2.5A are needed to charge a 2200 pF load with 18V in 16 ns.

To operate the MOSFET driver over a wide frequency range with low supply impedance a ceramic and low ESR film capacitor are recommended to be placed in parallel between the driver V<sub>DD</sub> and GND. A 1.0  $\mu$ F low ESR film capacitor and a 0.1  $\mu$ F ceramic capacitor placed between V<sub>DD</sub> and GND pins should be used. These capacitors should be placed close to the driver to minimized circuit board parasitics and provide a local source for the required current.

#### 4.4 PCB Layout Considerations

Proper PCB layout is important in a high current, fast switching circuit to provide proper device operation and robustness of design. PCB trace loop area and inductance should be minimized by the use of ground planes or trace under MOSFET gate drive signals, separate analog and power grounds, and local driver decoupling. Placing a ground plane beneath the MCP1403/4/5 will help as a radiated noise shield as well as providing some heat sinking for power dissipated within the device.

#### 4.5 **Power Dissipation**

The total internal power dissipation in a MOSFET driver is the summation of three separate power dissipation elements.

$$P_T = P_L + P_Q + P_{CC}$$

Where:

P<sub>T</sub> = Total power dissipation

P<sub>L</sub> = Load power dissipation

P<sub>Q</sub> = Quiescent power dissipation

 $P_{CC}$  = Operating power dissipation

#### 4.5.1 CAPACITIVE LOAD DISSIPATION

The power dissipation caused by a capacitive load is a direct function of frequency, total capacitive load, and supply voltage. The power lost in the MOSFET driver for a complete charging and discharging cycle of a MOSFET is:

$$P_L = f \times C_T \times V_{DD}^{2}$$

Where:

f = Switching frequency

C<sub>T</sub> = Total load capacitance

V<sub>DD</sub> = MOSFET driver supply voltage

## 4.5.2 QUIESCENT POWER DISSIPATION

The power dissipation associated with the quiescent current draw depends upon the state of the input pin. The MCP1403/4/5 devices have a quiescent current draw when both inputs are high of 1.0 mA (typ) and 0.15 mA (typ) when both inputs are low. The quiescent power dissipation is:

$$P_{Q} = (I_{QH} \times D + I_{QL} \times (1 - D)) \times V_{DD}$$
  
Where:  
$$I_{QH} = \text{Quiescent current in the high state}$$
$$D = \text{Duty cycle}$$
$$I_{QL} = \text{Quiescent current in the low state}$$
$$V_{DD} = \text{MOSFET driver supply voltage}$$

### 4.5.3 OPERATING POWER DISSIPATION

The operating power dissipation occurs each time the MOSFET driver output transitions because for a very short period of time both MOSFETs in the output stage are on simultaneously. This cross-conduction current leads to a power dissipation describes as:

$$P_{CC} = CC \times f \times V_{DD}$$

Where:

CC = Cross-conduction constant (A\*sec)


f = Switching frequency

V<sub>DD</sub> = MOSFET driver supply voltage

 $<sup>\</sup>ensuremath{\textcircled{}^{\odot}}$  2007 Microchip Technology Inc.


### 5.0 PACKAGING INFORMATION


#### 5.1 Package Marking Information (Not to Scale)

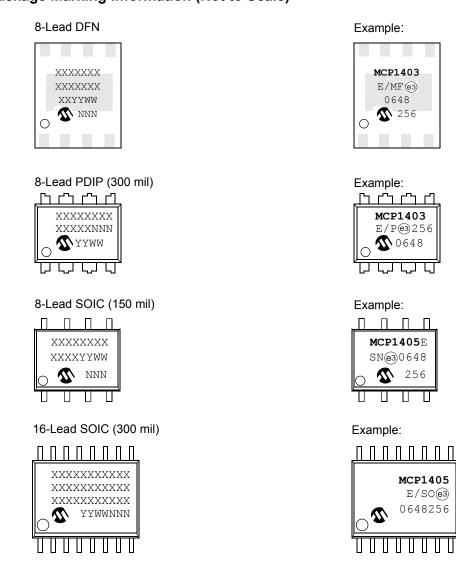



Legend	: XXX Y YY WW NNN @3 *	Customer-specific information Year code (last digit of calendar year) Year code (last 2 digits of calendar year) Week code (week of January 1 is week '01') Alphanumeric traceability code Pb-free JEDEC designator for Matte Tin (Sn) This package is Pb-free. The Pb-free JEDEC designator (e3) can be found on the outer packaging for this package.
Note:	be carrie	nt the full Microchip part number cannot be marked on one line, it will d over to the next line, thus limiting the number of available s for customer-specific information.

#### 8-Lead Plastic Dual Flat, No Lead Package (MF) – 6x5 mm Body [DFN-S] PUNCH SINGULATED



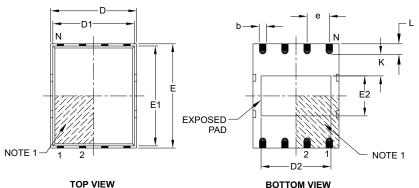



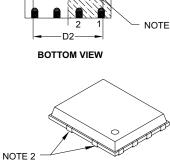

	MILLIMETERS				
	<b>Dimension Limits</b>	MIN	NOM	MAX	
Number of Pins	N		8		
Pitch	e		1.27 BSC		
Overall Height	A	-	0.85	1.00	
Molded Package Thickness	A2	-	0.65	0.80	
Standoff	A1	0.00	0.01	0.05	
Base Thickness	A3	0.20 REF			
Overall Length	D	4.92 BSC			
Molded Package Length	D1	4.67 BSC			
Exposed Pad Length	D2	3.85	4.00	4.15	
Overall Width	E		5.99 BSC	•	
Molded Package Width	E1		5.74 BSC		
Exposed Pad Width	E2	2.16	2.31	2.46	
Contact Width	b	0.35	0.40	0.47	
Contact Length	L	0.50	0.60	0.75	
Contact-to-Exposed Pad	К	0.20	-	-	
Model Draft Angle Top	φ	-	-	12°	

#### Notes:

1. Pin 1 visual index feature may vary, but must be located within the hatched area.

2. Package may have one or more exposed tie bars at ends.

3. Dimensioning and tolerancing per ASME Y14.5M.


BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.

Microchip Technology Drawing C04-113B

#### 8-Lead Plastic Dual In-Line (P) – 300 mil Body [PDIP]

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

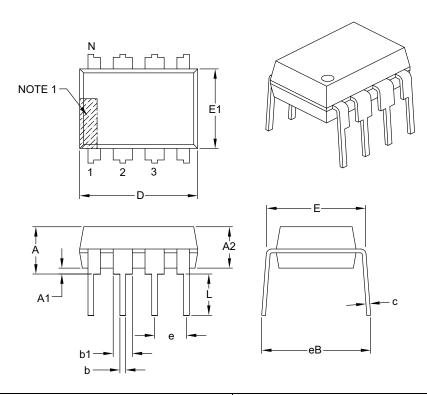

	Units	INCHES		
Dimensio	on Limits	MIN	NOM	MAX
Number of Pins	Ν		8	
Pitch	е		.100 BSC	
Top to Seating Plane	Α	-	-	.210
Molded Package Thickness	A2	.115	.130	.195
Base to Seating Plane	A1	.015	-	-
Shoulder to Shoulder Width	E	.290	.310	.325
Molded Package Width	E1	.240	.250	.280
Overall Length	D	.348	.365	.400
Tip to Seating Plane	L	.115	.130	.150
Lead Thickness	С	.008	.010	.015
Upper Lead Width	b1	.040	.060	.070
Lower Lead Width	b	.014	.018	.022
Overall Row Spacing §	eB	-	-	.430

#### Notes:

1. Pin 1 visual index feature may vary, but must be located with the hatched area.

2. § Significant Characteristic.

3. Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed .010" per side.


4. Dimensioning and tolerancing per ASME Y14.5M.

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

Microchip Technology Drawing C04-018B

#### 8-Lead Plastic Small Outline (SN) – Narrow, 3.90 mm Body [SOIC]

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

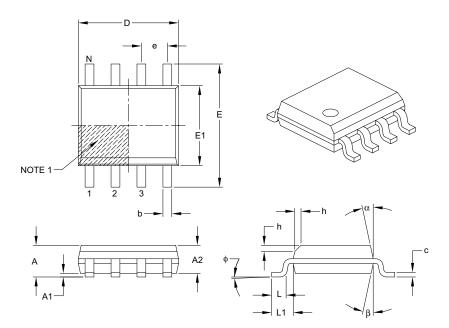

	Units			MILLIMETERS			
	Dimension Limits	MIN	NOM	MAX			
Number of Pins	N		8				
Pitch	e		1.27 BSC				
Overall Height	А	-	-	1.75			
Molded Package Thickness	A2	1.25	-	-			
Standoff §	A1	0.10	-	0.25			
Overall Width	E	6.00 BSC					
Molded Package Width	E1	3.90 BSC					
Overall Length	D	4.90 BSC					
Chamfer (optional)	h	0.25 – 0.50					
Foot Length	L	0.40	-	1.27			
Footprint	L1		1.04 REF				
Foot Angle	φ	0°	-	8°			
Lead Thickness	С	0.17	-	0.25			
Lead Width	b	0.31	-	0.51			
Mold Draft Angle Top	α	5°	-	15°			
Mold Draft Angle Bottom	β	5°	-	15°			

#### Notes:

1. Pin 1 visual index feature may vary, but must be located within the hatched area.

2. § Significant Characteristic.

3. Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed 0.15 mm per side.

4. Dimensioning and tolerancing per ASME Y14.5M.


BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.

Microchip Technology Drawing C04-057B

#### 16-Lead Plastic Small Outline (SO) – Wide, 7.50 mm Body [SOIC]

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

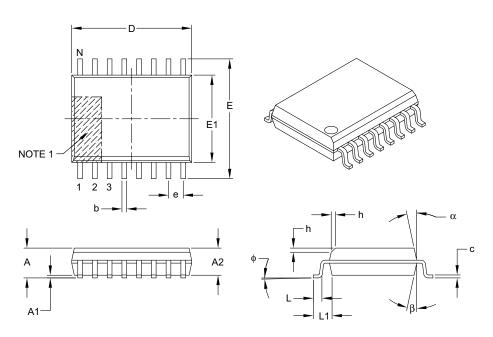

	Units	MILLIMETERS			
	Dimension Limits	MIN	NOM	MAX	
Number of Pins	N		16		
Pitch	e		1.27 BSC		
Overall Height	A	-	-	2.65	
Molded Package Thickness	A2	2.05	_	-	
Standoff §	A1	0.10	_	0.30	
Overall Width	E	10.30 BSC			
Molded Package Width	E1	7.50 BSC			
Overall Length	D	10.30 BSC			
Chamfer (optional)	h	0.25	_	0.75	
Foot Length	L	0.40	_	1.27	
Footprint	L1		1.40 REF		
Foot Angle	φ	0°	-	8°	
Lead Thickness	С	0.20	_	0.33	
Lead Width	b	0.31	-	0.51	
Mold Draft Angle Top	α	5°	-	15°	
Mold Draft Angle Bottom	β	5°	-	15°	

#### Notes:

1. Pin 1 visual index feature may vary, but must be located within the hatched area.

2. § Significant Characteristic.

3. Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed 0.15 mm per side.

4. Dimensioning and tolerancing per ASME Y14.5M.

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.

Microchip Technology Drawing C04-102B

#### APPENDIX A: REVISION HISTORY

#### Revision B (May 2007)

- Page 13: Updated Package Outline Drawing
- Page 14: Updated Package Outline Drawing
- Page 15: Updated Package Outline Drawing
- Page 16: Updated Package Outline Drawing
- Page 17: Updated Revision History
- Page 19: Corrected Package Codes in Product Identification System

#### **Revision A (December 2006)**

• Original Release of this Document.

 $<sup>\</sup>ensuremath{\textcircled{}^{\odot}}$  2007 Microchip Technology Inc.

NOTES:

#### **PRODUCT IDENTIFICATION SYSTEM**

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

PART NO. X XX	Exar	Examples:	
Device Temperature Package Range	a)	MCP1403-E/SN:	4.5A Dual Inverting MOSFET Driver, 8LD SOIC package.
Device: MCP1403: 4.5A Dual MOSFET Driver, Inverting MCP1403T: 4.5A Dual MOSFET Driver, Inverting (Tape and Reel) MCP1404: 4.5A Dual MOSFET Driver, Non-Inverting MCP1404T: 4.5A Dual MOSFET Driver, Non-Inverting (Tape and Reel) MCP1405T: 4.5A Dual MOSFET Driver, Complementary MCP1405T: 4.5A Dual MOSFET Driver, Complementary (Tape and Reel)	b)	MCP1403-E/P:	4.5A Dual Inverting MOSFET Driver, 8LD PDIP package.
	c)	MCP1403-E/MF:	
	d)	MCP1403-E/SO:	
Temperature Range: E = -40°C to +125°C	a)	MCP1404T-E/SN:	4.5A Dual Non-Inverting, MOSFET Driver,
Package: * MF = Dual, Flat, No-Lead (6x5 mm Body), 8-lead P = Plastic DIP, (300 mil body), 8-lead SN = Plastic SOIC (150 mil Body), 8-Lead SO = Plastic SOIC (Wide), 16-Lead	b)	MCP1404-E/P:	8LD SOIC package, 4.5A Dual Non-Inverting, MOSFET Driver, 8LD PDIP package.
* All package offerings are Pb Free (Lead Free)	a)	MCP1405-E/SN:	4.5A Dual Complementary, MOSFET Driver, 8LD SOIC package.
	b)	MCP1405-E/P:	4.5A Dual Complementary, MOSFET Driver, 8LD PDIP package.
	c)	MCP1405T-E/SO:	Tape and Reel, 4.5A Dual Complementary MOSFET Driver, 16LD SOIC package.

<sup>© 2007</sup> Microchip Technology Inc.

NOTES:

#### Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

#### Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, KEELOQ logo, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, rfPIC and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


AmpLab, FilterLab, Linear Active Thermistor, Migratable Memory, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

 $\ensuremath{\textcircled{\sc 0}}$  2007, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.



## QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELoQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

© 2007 Microchip Technology Inc.

<u>ISO/TS 16949:2002</u>



## WORLDWIDE SALES AND SERVICE

#### AMERICAS

Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: http://support.microchip.com Web Address: www.microchip.com

Atlanta Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Boston Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075

**Dallas** Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara, CA Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto Mississauga, Ontario, Canada Tel: 905-673-0699 Fax: 905-673-6509

#### ASIA/PACIFIC

Asia Pacific Office Suites 3707-14, 37th Floor Tower 6, The Gateway Habour City, Kowloon Hong Kong Tel: 852-2401-1200 Fax: 852-2401-3431 Australia - Sydney

Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

**China - Beijing** Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

**China - Chengdu** Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

**China - Fuzhou** Tel: 86-591-8750-3506 Fax: 86-591-8750-3521

**China - Hong Kong SAR** Tel: 852-2401-1200 Fax: 852-2401-3431

**China - Qingdao** Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

**China - Shanghai** Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

**China - Shenzhen** Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Shunde Tel: 86-757-2839-5507 Fax: 86-757-2839-5571

**China - Wuhan** Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

**China - Xian** Tel: 86-29-8833-7250 Fax: 86-29-8833-7256

#### ASIA/PACIFIC

India - Bangalore Tel: 91-80-4182-8400 Fax: 91-80-4182-8422

**India - New Delhi** Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

**Japan - Yokohama** Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Gumi Tel: 82-54-473-4301 Fax: 82-54-473-4302

Korea - Seoul Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

**Malaysia - Penang** Tel: 60-4-646-8870 Fax: 60-4-646-5086

Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069

**Singapore** Tel: 65-6334-8870 Fax: 65-6334-8850

**Taiwan - Hsin Chu** Tel: 886-3-572-9526 Fax: 886-3-572-6459

**Taiwan - Kaohsiung** Tel: 886-7-536-4818 Fax: 886-7-536-4803

Taiwan - Taipei Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

**Thailand - Bangkok** Tel: 66-2-694-1351 Fax: 66-2-694-1350

#### EUROPE

Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

**Germany - Munich** Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340

**Spain - Madrid** Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

**UK - Wokingham** Tel: 44-118-921-5869 Fax: 44-118-921-5820

12/08/06